

**Installation Notes:**

Position the front wheel between the fork legs and insert the axle from the left side, through the left fork leg and when hub.


Position the lug on the speedometer gear box against the lug (8) on the left fork leg. Tighten the axle bolt to the specified torque .

Front axle torque :

60 N·m (6.0 kg-m , 43 lb-ft)

Fit the caliper over the disc, taking care not to damage the brake pads. Install the caliper fixing bolts and tighten to a torque of:

27 N·m (2.7 kg-m , 20 lb-ft)

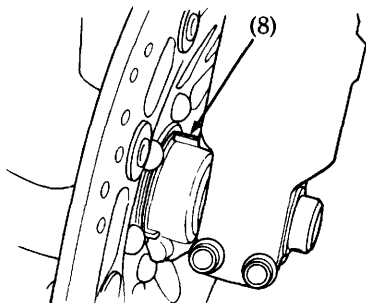

(8) Lug