


5. Apply the brake several times and check for free wheel rotation after the brake lever is released.

Tighten the front brake cable guide bolt.

After adjustment, push the brake arm (8) to confirm that there is proper freeplay.

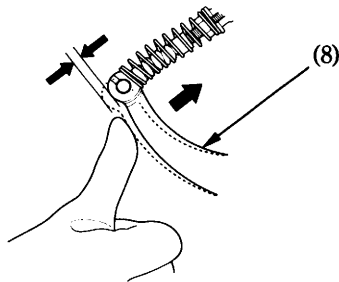

(8) Brake arm

After adjustment, confirm the freeplay of the brake lever.

#### Other Checks:

Check the brake cable for kinks or signs of wear that could cause sticking or failure.

Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear and corrosion.

Make sure the brake arm, spring and fasteners are in good condition.