

SPARK PLUG

Refer to the Safety Precautions on page 50.

Recommended plugs:

Standard:

DR8ES-L (NGK) or
X24ESR-U (DENSO)

For cold climate: (Below 5°C, 41°F)

DR7ES (NGK) or
X22ESR-U (DENSO)

For extended high speed riding:


DR8ES (NGK) or
X27ESR-U (DENSO)

NOTICE

Never use a spark plug with an improper heat range. Severe engine damage could result.

1. Disconnect the spark plug cap (1) from the spark plug.
2. Clean any dirt from around the spark plug base.

Remove the spark plug using the spark plug wrench (2) furnished in the tool kit.

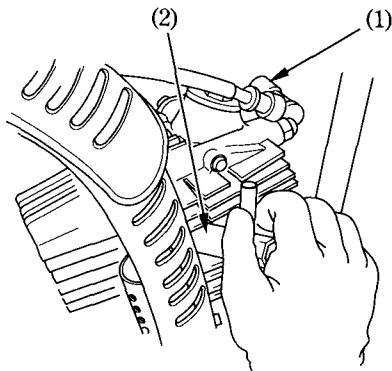

(1) Spark plug cap

(2) Plug wrench