


2. If adjustment is necessary, loosen the rear axle nut ③.
3. Adjust the chain slack with the lock nut ⑥ by turning it in the clockwise, this will decrease the chain slack; turning the counterclockwise will loosen the chain. Upon completion of adjustment, the index mark ④ on the both the right and left chain adjusters should be at the same reference marks ⑤ on the rear forks.
4. Finally, tighten the axle nut securely to prevent the nut from loosening.

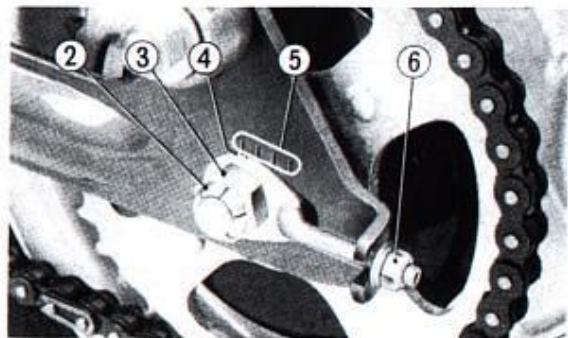

- ② Rear axle
- ③ Rear axle nut
- ④ Index mark
- ⑤ Rear fork reference marks
- ⑥ Chain adjuster lock nut