


## BELT CASE AIR CLEANER


Refer to the Safety Precautions on page 131.

1. Place the scooter on its center stand.
2. Remove the left floor mat (1).
3. Lower the side stand.
4. Remove the left pillion step (2) by removing the cap (3) and bolt A (4).
5. Carefully remove the left floor skirt (5) by removing the clips (6), bolt B (7) and screws (8).

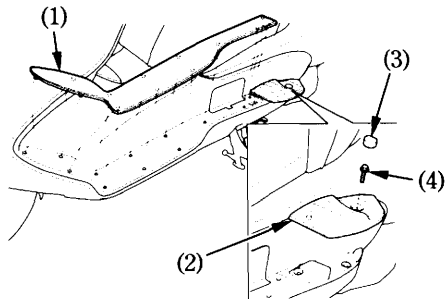

- (1) Floor mat  
(2) Pillion step

- (3) Cap  
(4) Bolt A

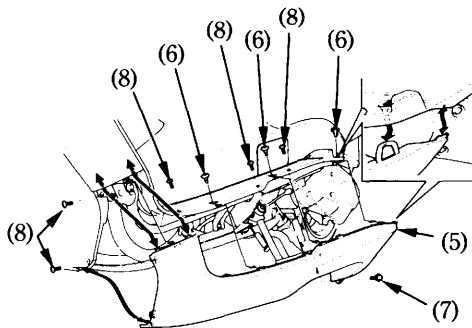

- (5) Left floor skirt  
(6) Clips

- (7) Bolt B  
(8) Screws