


3. Minor adjustments can be made with the front brake cable adjuster on the front brake lever.


Loosen the lock nut ④ and turn the front brake cable adjuster ⑤. Turning the adjuster in direction A will decrease the brake lever free play, and turning the adjuster in direction B will increase the free play.

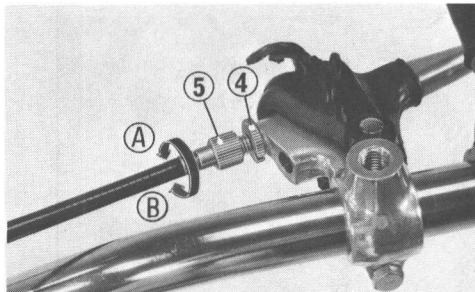

④ Lock nut ⑤ Front brake cable adjuster

Rear Brake Adjustment

Rear brake pedal free play, measured at the tip of the rear brake pedal ①, should be maintained at 20–30 mm (0.8~1.2 in). Free play is the distance the brake pedal moves before the brake starts to engage.

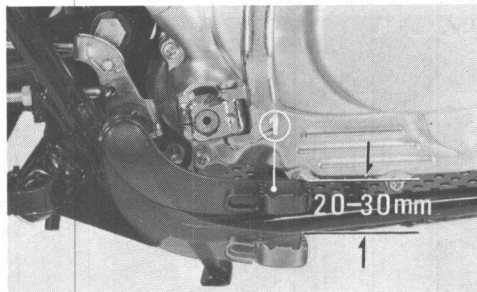

① Rear brake pedal