


Clutch System

Clutch Adjustment

Refer to *Safety Precautions* on page 75 .

LEFT HANDLEBAR

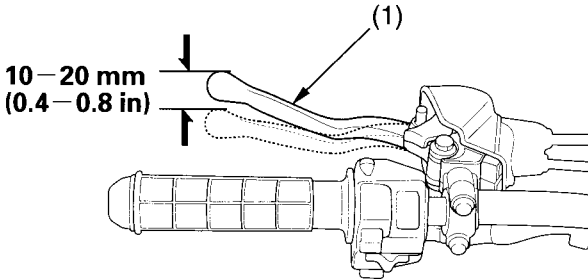

(1) clutch/parking brake lever

Clutch adjustment may be required if the ATV tends to creep or if the clutch slips when shifting into gear, causing acceleration to lag behind engine speed.

Inspection

Check freeplay.

Freeplay:

10 – 20 mm (0.4 – 0.8 in)

If necessary, adjust to the specified range.

Improper freeplay adjustment can cause premature clutch wear.