

## IDLE SPEED


Refer to the Safety Precautions on page 73 .

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

1. Warm up the engine, shift to neutral and place the motorcycle on its stand.
2. Turn the bolt (1) 90° counterclockwise and pull the right lower cowl (2).
3. Adjust idle speed with the throttle stop screw (3).

Idle speed (In neutral):

$1,300 \pm 100 \text{ min}^{-1} (\text{rpm})$

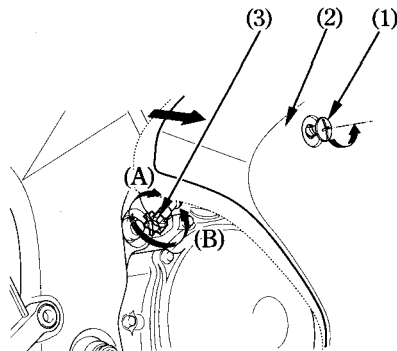

- |                         |              |
|-------------------------|--------------|
| (1) Bolt                | (A) Increase |
| (2) Right lower cowl    | (B) Decrease |
| (3) Throttle stop screw |              |