


# Brakes

Refer to *Safety Precautions* on page 47.


## Front Brake Lever Freeplay

RIGHT  
SIDE

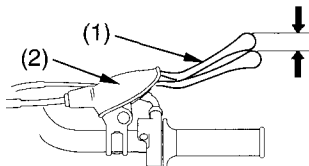

- (1) front brake lever  
(2) dust cover

RIGHT  
SIDE

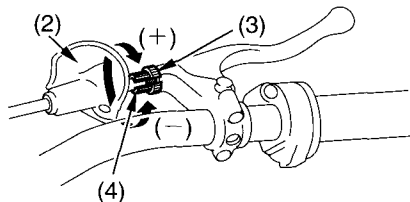

- (3) lock nut (+) increase freeplay  
(4) front brake cable adjuster (-) decrease freeplay

## Inspection

Check freeplay by pulling in slowly on the front brake lever (1) until the brake starts to engage.

Freeplay:  $3/8 - 13/16$  in (10 – 20 mm)

If necessary, adjust to the specified range.

## Adjustment

1. Pull the rubber dust cover (2) back.
2. Loosen the lock nut (3) and turn the front brake cable adjuster (4).
3. Tighten the lock nut. Return the dust cover to its normal position.
4. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.