


THROTTLE VALVE/CABLE INSTALLATION


Install the jet needle on the throttle valve
Install the sealing cap, carburetor top, return spring and retaining plate.

NOTE

Install the plate with the lug facing up.

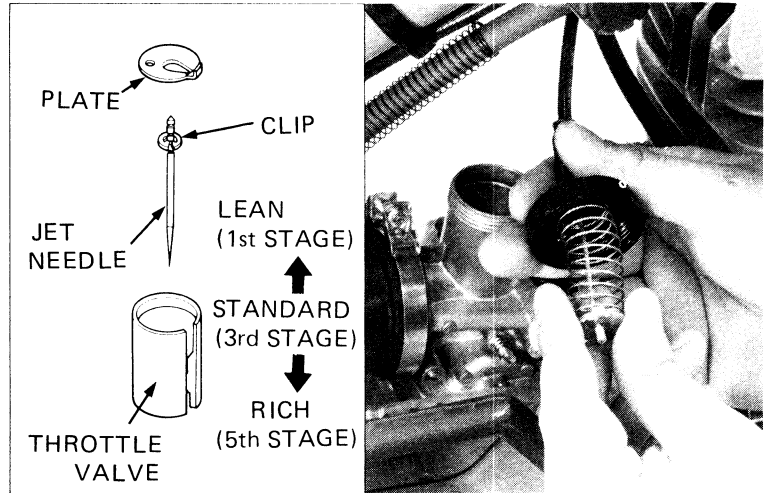

Compress the spring and insert the throttle cable into the throttle valve.

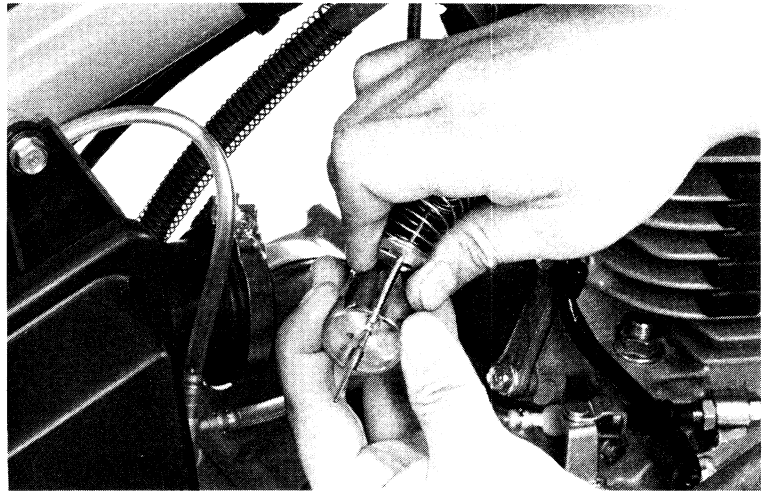

Insert the retaining plate into the recess of the throttle valve fully and secure with the clip.

