
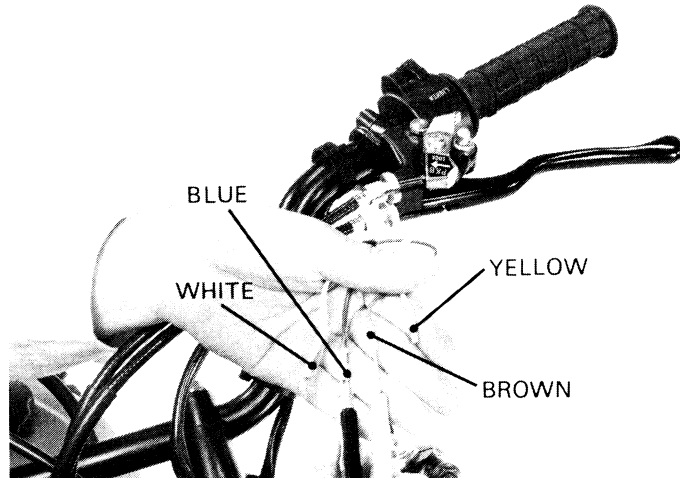


HEADLIGHT DIMMER SWITCH

Disconnect the switch terminals behind the right side of the headlight case.

Check the switch for continuity between the terminals shown in the table for each switch position.

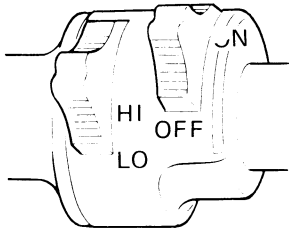

LIGHT SWITCH	WHITE	YELLOW	BROWN	BLUE
OFF				
LOW	○	○	○	
(N)	○	○	○	○
HIGH		○	○	○

The switch is normal if there is continuity between the circuit marked "O-O".

ENGINE STOP SWITCH

Check the switch for continuity between the Black and Green terminals with the switch "OFF".

The switch is normal if there is continuity between the terminals.

	BLACK	GREEN
OFF		
ON	○	○

