





ASSEMBLY

Apply grease to the parking brake shaft and thread the shaft into the parking brake assembly.

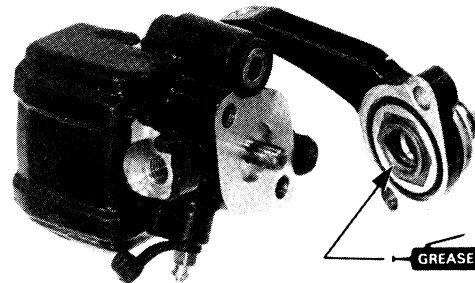

Install the parking brake assembly on the brake caliper. Install the bolts and tighten to the specified torque.

**TORQUE: 18-25 N·m (1.8-2.5 kg-m,
13-18 ft-lb)**

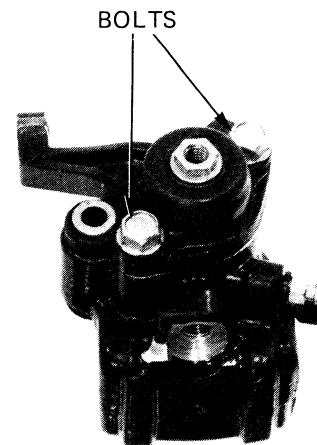

Install the brake caliper on the swingarm.

**TORQUE: 18-25 N·m (1.8-2.5 kg-m,
13-18 ft-lb)**

Route the end of the parking brake cable through the parking brake assembly.

Connect the cable end to the parking brake cable arm on the parking brake assembly.

Align the punch marks on the arm and on the holder as shown.

