


**CLUTCH/OIL PUMP/KICK STARTER**


EXTENSION 07716-0020500 LOCK NUT WRENCH, 17 x 27 mm  
OR EQUIVALENT COMMERCIAL- 07716-0020300 OR EQUIVALENT  
LY AVAILABLE IN U.S.A. COMMERCIALY AVAILABLE IN U.S.A.

Install the clutch center holder as shown, and remove the lock nut.

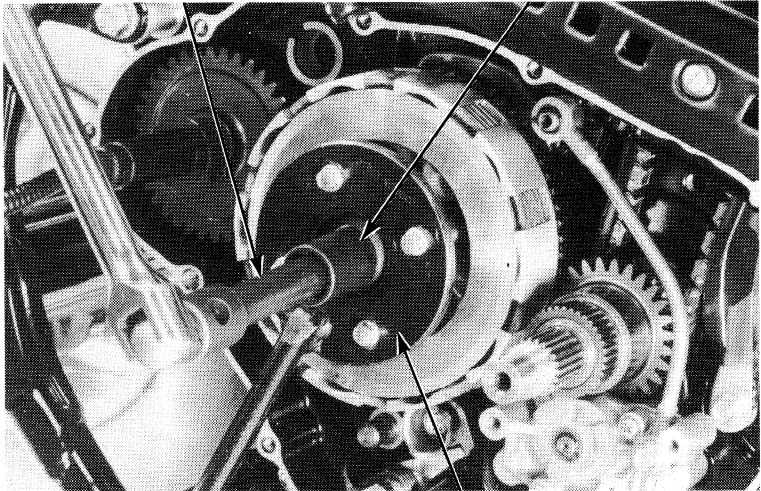

CLUTCH CENTER HOLDER 07923-KE10001  
OR EQUIVALENT COMMERCIALY AVAILABLE IN U.S.A.


Remove the outside washer, clutch, center, discs, plates and pressure plates.

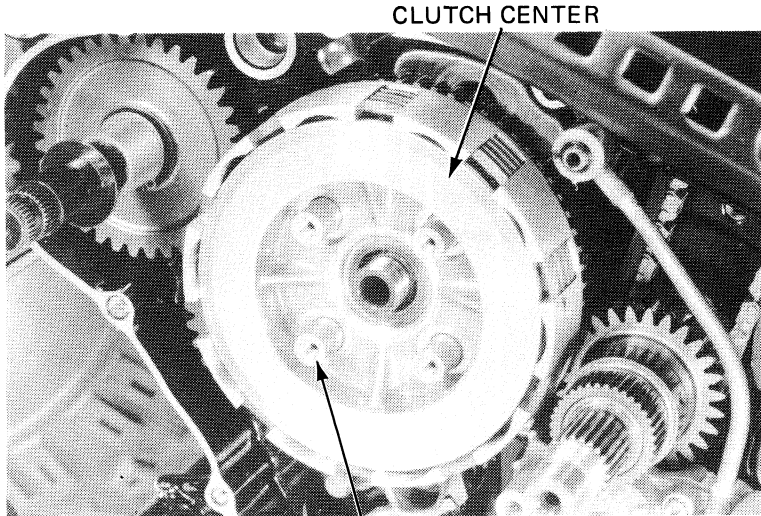

CLUTCH CENTER

CLUTCH PRESSURE PLATE

Remove the thrust washer and clutch outer.

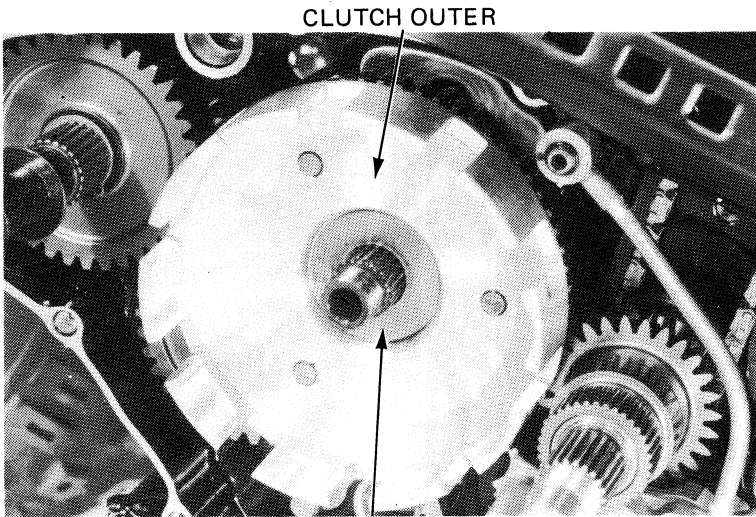

CLUTCH OUTER

THRUST WASHER