
Brakes

Rear Brake Lever Freeplay

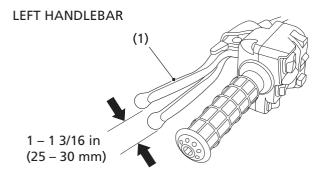

(1) rear brake lever/parking brake lever

Inspection

- 1. Press down on the rear brake pedal several times.
- 2. Measure the distance the rear brake lever/parking brake lever (1) moves before the brake starts to take hold. Freeplay (measurement at the tip of the end of the brake lever) should be:
 - 1 1 3/16 in (25 30 mm)
- 3. If necessary, adjust to the specified range.