
## Throttle

## **Throttle Freeplay**

Refer to Safety Precautions on page 60.

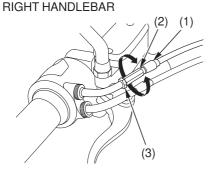

- (1) throttle cable boot
- (2) adjuster
- (3) lock nut

Inspection

Check freeplay at the throttle grip flange. Freeplay:

1/16-1/4 in (2-6 mm)

If necessary, adjust to the specified range.

Adjustment

- 1. Slide the throttle cable boot (1) off the adjuster (2).
- 2. Loosen the lock nut (3).
- 3. Turn the adjuster.
- 4. Tighten the lock nut and return the throttle cable boot securely over the adjuster.
- 5. After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.