


F-7 Front Wheel

1 6

F-7 Front Wheel

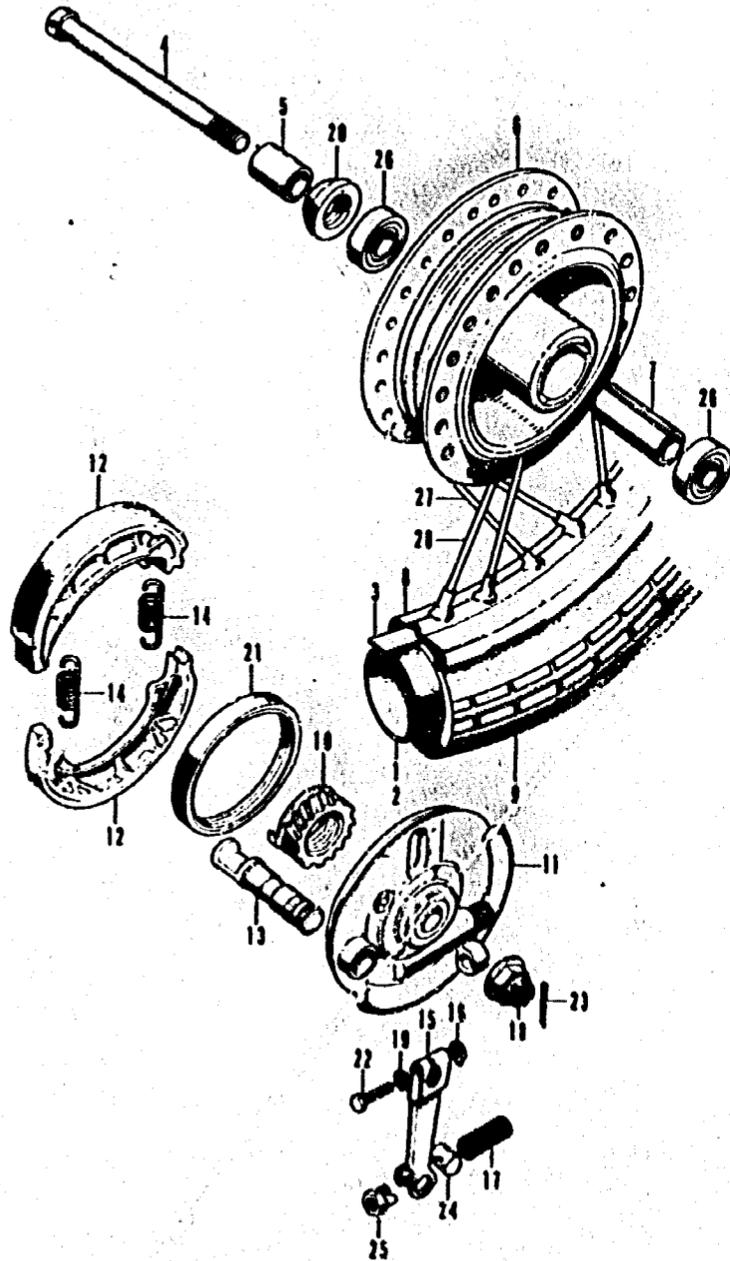

Ref. No.	Part No.	Description	Reqd. No. CB125S1	Serial No.	Area Code
1	42712-304-003	TUBE, WHEEL (2.75-18 BS)	1		
2	42712-304-006	TUBE, WHEEL (2.75-18 NITTO)	1		
3	42713-304-003	FLAP, REAR TUBE (BS)	1		
	42713-304-006	FLAP, REAR TUBE (NITTO)	1		
4	44301-107-000	AXLE, FRONT WHEEL	1		
5	44311-229-000	COLLAR, FRONT WHEEL SIDE	1		
6	44601-107-770	HUB, FRONT WHEEL	1		
7	44620-030-000	COLLAR, FRONT AXLE DISTANCE	1		
8	44701-028-000	RIM, FRONT WHEEL	1		
9	44711-330-003	TIRE, FRONT WHEEL (2.75-18 BS)	1		
	44711-330-006	TIRE, FRONT WHEEL (2.75-18 NITTO)	1		
10	44804-028-000	GEAR COMP., SPEEDOMETER	1		
11	45010-102-000	PANEL COMP., FRONT BRAKE	1	1120001	01,03,E,F,U
	45010-350-000	PANEL COMP., FRONT	1	1120002	01,03,E,F,U SA
12	45120-001-010	SHOE COMP., FRONT BRAKE	2		
13	45131-030-000	CAM, FRONT BRAKE	1		
14	45133-028-000	SPRING, FRONT BRAKE SHOF	2		
15	45410-028-000	ARM, FRONT BRAKE	1		
16	45436-001-000	NUT, FRONT BRAKE ARM SETTING	1		
17	45437-001-000	SPRING, FRONT BRAKE ARM	1		
18	90305-051-000	NUT, REAR AXLE	1		
19	90525-701-000	WASHER, REAR BRAKE ARM	1		
20	90755-229-000	OIL SEAL, 21X35X7	1		
21	91251-030-000	OIL SEAL, 47X58X7	1		
22	92000-06025	ROLL, HEX., 6X25	1		
23	94201-30250	WASHER, SPLIT, 3.0X25	1		
24	95015-31000	JOINT A, BRAKE ARM	1		
25	95015-41000	NUT A, ADJUSTING	1		
26	96140-63010	BEARING, RADIAL BALL, 6301R	2		
27	97142-21187-10	SPOKE, A12X173.5	18		
28	97407-21186-10	SPOKE, A12X173	18		

B110-21