


E-6 Left Crankcase Cover



E-6 Left Crankcase Cover

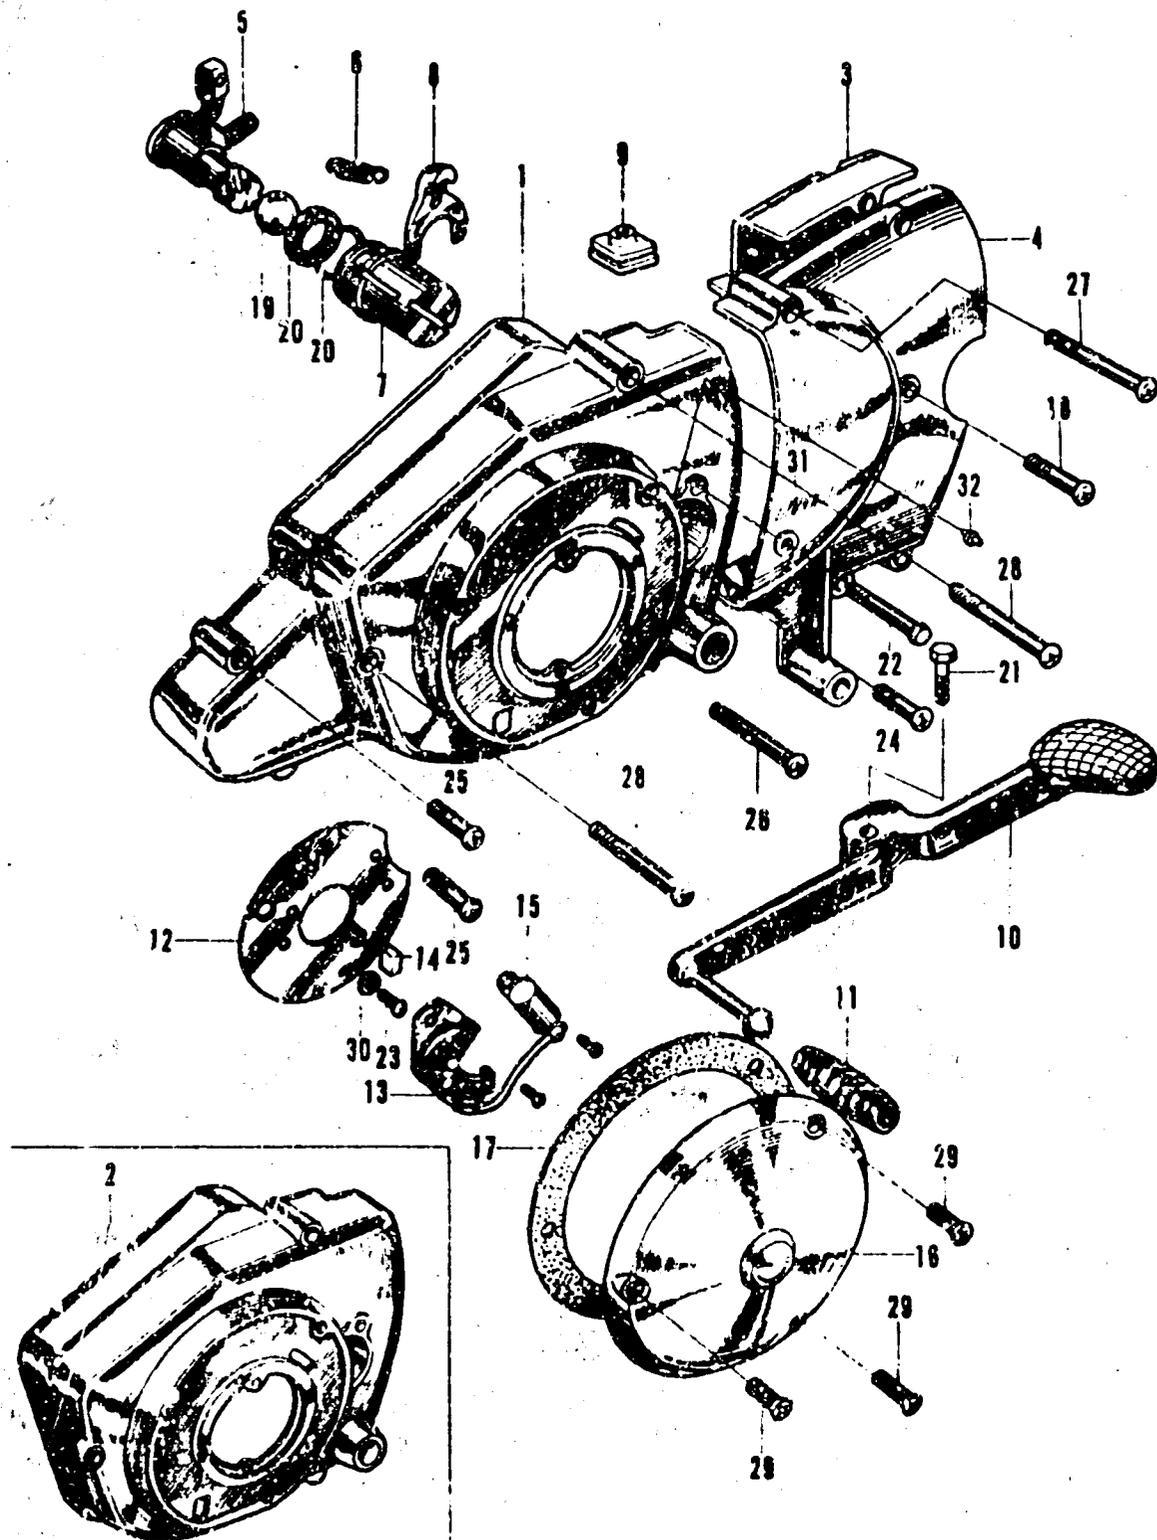

Ref. No.	Part No.	Description	No. Reqd.		Remarks
			CD 125	CD 125A	
1	11340-230-010	COVER, left, crankcase	1		CD125E-1012758-1090425
	11340-230-020	COVER, left, crankcase	1		CD125E-1090426-1113956
	11340-230-030	COVER, left, crankcase	1		CD125E-1113957
2	11340-240-000	COVER, left, crankcase	1		CD125E-1063468-1090425
	11340-240-010	(Superseded by 11340-240-020 with 93500-05012-0A & 93700-05016-0F)	1		CD125E-1090426-111395F
	11340-240-020	COVER, left, crankcase	1		CD125E-1113957
3	11665-230-000	(Superseded by 11665-230-010 with 90028-230-000)	1	1	CD125E-1012758-1021130
	11665-230-010	COVER B, drive chain	1	1	CD125E-1021131
4	15751-230-050	COVER A, drive chain	1	1	
5	22810-224-010	THREAD, clutch lifter	1	1	
6	22815-200-000	SPRING, clutch lever	1	1	
7	22841-202-000	ADJUSTER, clutch	1	1	
8	22844-200-000	PEACE, adjuster fixing	1	1	
9	22875-224-000	JOINT, clutch wire	1	1	
10	24700-230-010	PEDAL, gear change	1	1	
11	24781-105-000	RUBBER, gear change pedal	1	1	
	30200-003-003	(Superseded by 30200-230-014 with 30201-230-003)	1	1	CD125E-1012758-1113956
	30200-230-003	(Superseded by 30200-230-014)	1	1	CD125E-1113957
	30200-230-004	(Superseded by 30200-230-014)	1	1	CD125E-1012758-1113956
	30200-230-014	BREAKER ASSY., contact (DENSO)	1	1	CD125E-1113957
12	30201-003-003	PLATE, contact breaker base (KOKUSAN)	1	1	CD125E-1012758-1113956
	30201-230-003	PLATE, contact breaker base (KOKUSAN)	1	1	CD125E-1113957
	30201-230-004	PLATE, contact breaker base (DENSO)	1	1	CD125E-1012758-1113956
	30201-230-014	PLATE, contact breaker base (DENSO)	1	1	CD125E-1113957
13	30202-003-003	BREAKER, contact (KOKUSAN)	1	1	
	30202-230-004	BREAKER, contact (DENSO)	1	1	
14	30205-205-003	FELT, oil (KOKUSAN)	1	1	
	30205-205-014	FELT, oil (DENSO)	1	1	
15	30250-205-003	CONDENSER (KOKUSAN)	1	1	
	30250-205-014	CONDENSER (DENSO)	1	1	