

## Clutch Center Lock Nut Removal

Unstake the nut.


Set the clutch center holder to the pressure plate bosses and loosely install the nuts.

**S TOOL**

Clutch center holder

07JMB-MN50300

Temporarily remove the tool and tighten nuts; then reinstall the clutch center holder onto the bosses. Use at least two clutch lifter plate bolts to secure the tool to the clutch.

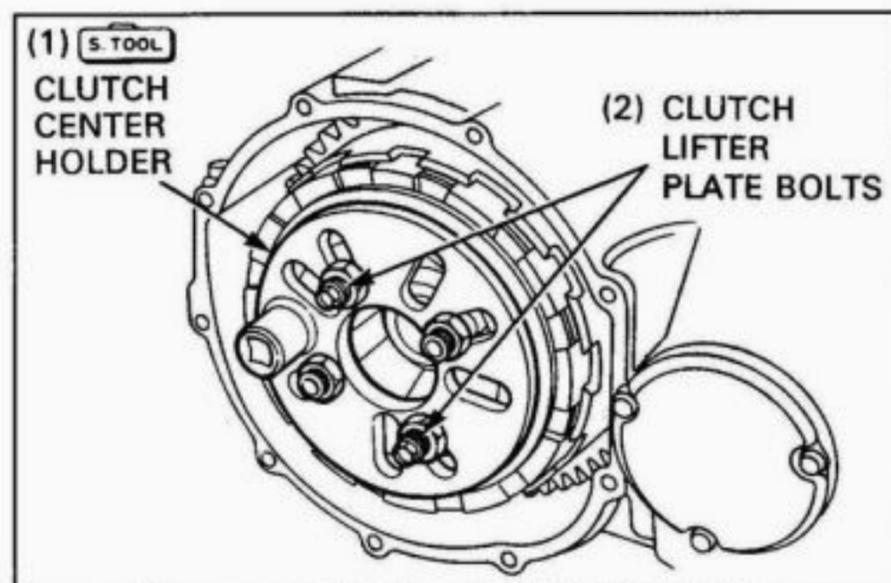

Hold the clutch center holder and remove the lock nut as shown.

**S TOOL**

Lock nut wrench, 26 × 30 mm

07716-0020203

Extension bar

07716-0020500

