

Remove the HESD unit (page 14-34).

Loosen the top bridge pinch bolts and handlebar pinch bolts.

Remove the steering stem nut and top bridge. Remove the handlebars from the fork sliders.

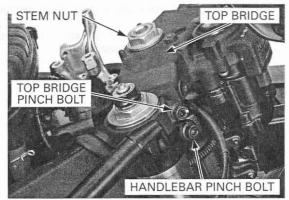

Remove the throttle cable housing/throttle pipe from the right handlebar.

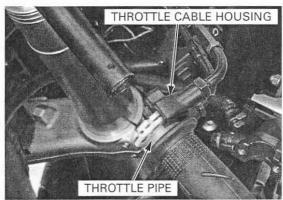


INSTALLATION

Make sure that the handlebar stopper ring is installed in the fork slider groove properly.



Apply grease to the sliding surface of the throttle pipe.

install the throttle cable housing/throttle pipe to the right handlebar.

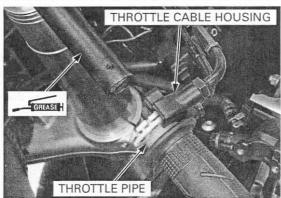

14-11