


Install the both brake calipers and tighten the new mounting bolts to the specified torque.

TORQUE: 45 N·m (4.6 kgf·m, 33 lbf·ft)




With the front brake applied, pump the forks up and down several times to seat the axle and check brake operation.

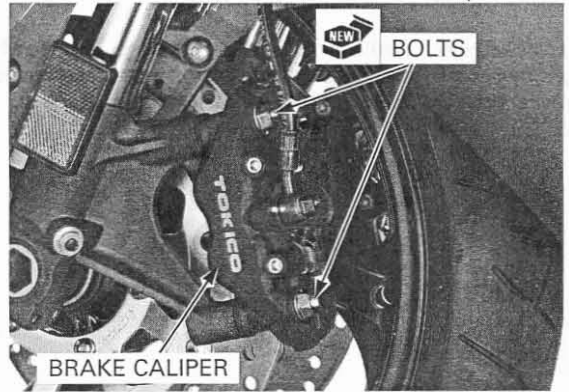

Tighten the left axle holder pinch bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

Recheck the front brake operation.

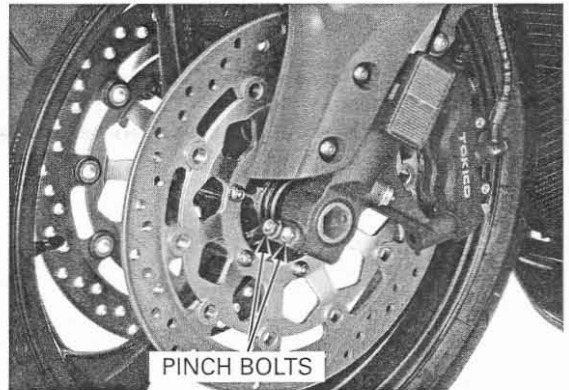

FORK

REMOVAL

Remove the following:

- Front wheel (page 14-16)
- Front fender (page 3-19)

Loosen the handlebar pinch bolt and fork top bridge pinch bolt.

When the fork leg will be disassembled, loosen the fork bolt, but do not remove it yet.

