GL1000 (GENERAL·AUSTRALIA TYPE)

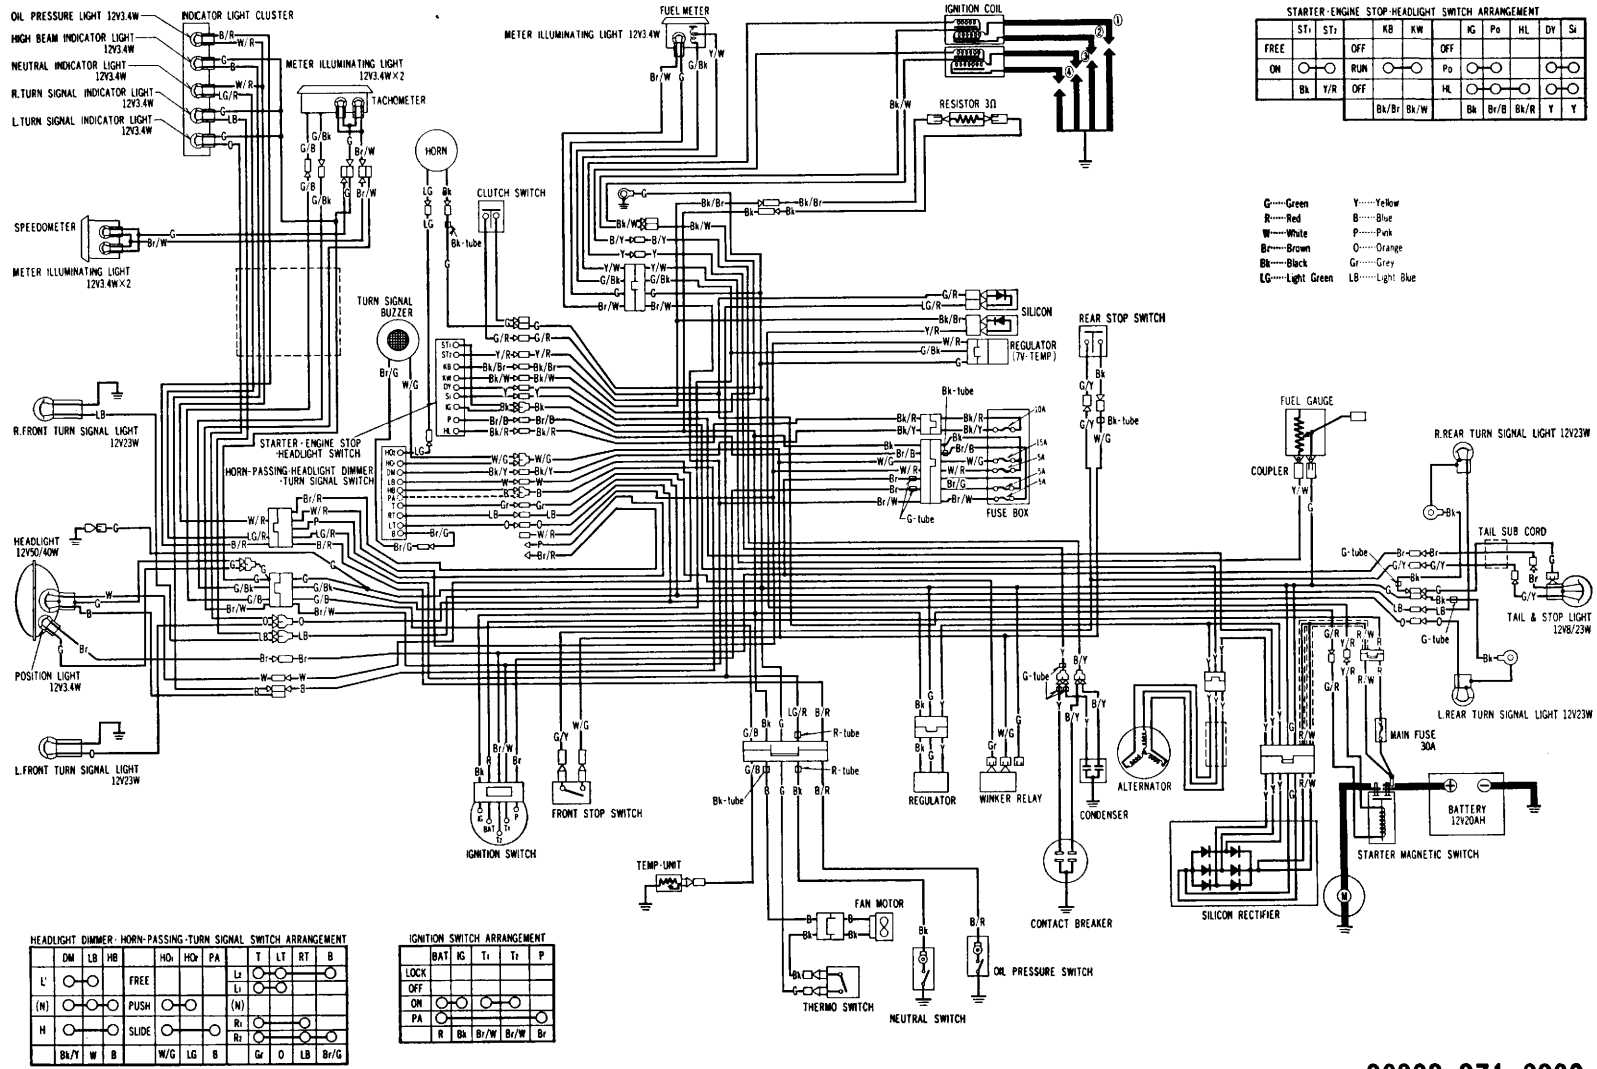

STARTER·ENGINE STOP·HEADLIGHT SWITCH ARRANGEMENT

	ST₁	ST₂		KB	KW		IG	Po	HL	DY	Si
FREE			OFF			OFF					
ON	○	○	RUN	○	○	Po	○	○		○	○
	Bk	Y/R	OFF			HL	○	○	○	○	○
				Bk/Br	Bk/W		Bk	Br/B	Bk/R	Y	Y

G·····Green Y·····Yellow
R·····Red B·····Blue
W·····White P·····Pink
Br·····Brown O·····Orange
Bk·····Black Gr·····Grey
LG·····Light Green LB·····Light Blue

HEADLIGHT DIMMER·HORN·PASSING·TURN SIGNAL SWITCH ARRANGEMENT

	DM	LB	HB		HO₁	HO₂	PA		T	LT	RT	B
L	○	○		FREE				L₁	○	○		
(N)	○	○	○	PUSH	○	○		(N)				
H	○		○	SLIDE	○		○	R₁	○		○	
								R₂	○		○	○
	Bk/Y	W	B		W/G	LG	B		Gr	O	LB	Br/G

IGNITION SWITCH ARRANGEMENT

	BAT	IG	T₁	T₂	P
LOCK					
OFF					
ON	○	○		○	
PA			○		○
	R	Bk	Br/W	Br/W	Br