

Reverse Lock System

Measure the reverse lever free play. Free play, measured at the lever end near the cable (Fig. 4-19), should be within 1/16—1/8 in (2—4 mm).

To adjust, loosen the lock nut (1) and turn the adjusting nut (2). Tighten the lock nut securely.

Other Checks:

Check the reverse lever and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your Honda dealer.

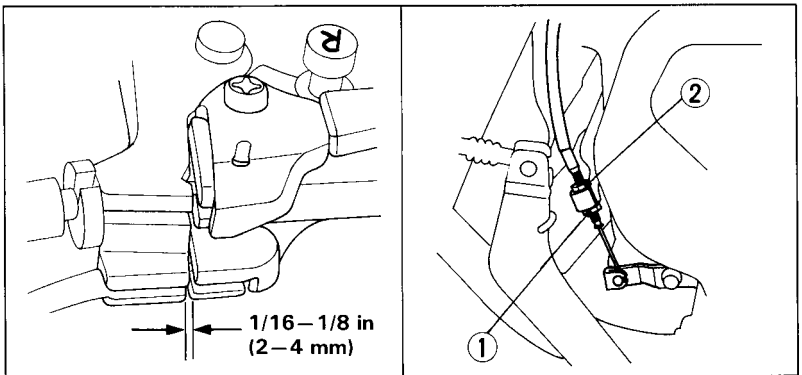


Fig. 4-19

(1) Lock nut

(2) Adjusting nut