Rear Wheel

Removal

- 1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
- 2. NC700XD NC750XD


Release the parking brake.

3. NC700XD NC750XD

Remove the mounting bolts and remove the parking brake caliper.

NC700XD NC750XD

Parking brake caliper

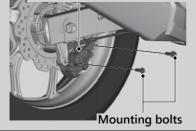

- 4. Loosen the rear axle nut, lock nuts and turn the adjusting nuts so the rear wheel can be moved all the way forward for maximum drive chain slack.
- 5. Remove the rear axle nut.

