

### High Air Temperature

35°C (95°F) or above

1. Do not use the choke.
2. Start the engine by pressing the starter button.

### Low Air Temperature

10°C (50°F) or below

1. Follow steps 1–3 under Normal Air Temperature.
2. Warm up the engine by opening and closing the throttle slightly.
3. Continue warming up the engine until it will idle smoothly with the choke lever moved to “Fully Closed (B)”.

### **CAUTION**

- \* *Extended use of the choke may impair piston and cylinder wall lubrication.*
- \* *Do not race the engine during the warm-up period. Racing a cold engine wastes fuel and increases engine wear.*

### **Kickstarting**

If the engine does not start with the electric starter, use the kickstarter.


1. Remove the right side cover.
2. Follow the step under Preparation and 1–2 under Normal Air Temperature.

#### **NOTE:**

- \* Do not use the choke when restarting a warm engine or when air temperature is 35°C (95°F) or above.
3. Start the engine by using the kick starter pedal (1).

#### **NOTE:**

- \* The engine will start only when the transmission is in neutral.

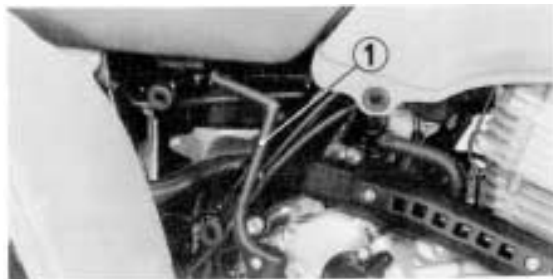

(1) Kick starter pedal