


Tyre Puncture ► Removing Wheels

Installation

1. Attach the side collars to the wheel.
2. On the left side, place the wheel between the fork legs and insert the front axle shaft, through the left fork leg and wheel hub.
3. Align the index line of the front axle shaft with the surface of the fork leg.

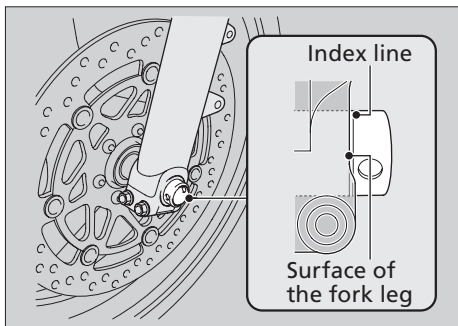

4. Tighten the left axle pinch bolts to hold the axle.
5. Tighten the front axle bolt.

Torque: 59 N·m (6.0 kgf·m, 44 lbf·ft).

6. Loosen the left axle pinch bolts.
7. Tighten the right axle pinch bolts.

Torque: 23 N·m (2.3 kgf·m, 17 lbf·ft).

8. Install the right and left brake calipers and tighten the fixing bolts.

Torque: 30 N·m (3.1 kgf·m, 22 lbf·ft).

- Take care to prevent the brake caliper from scratching the wheel during installation.

NOTICE

When installing the brake calipers into position on the fork legs, carefully fit the brake disc between the pads to avoid scratching them.