

Starting Procedure (after Preparation)

To restart a warm engine, follow the procedure for High Air Temperature.


Normal Air Temperature

$10^{\circ}-35^{\circ}\text{C}$ ($50^{\circ}-95^{\circ}\text{F}$)

1. Move the choke lever (4) while pushing it all the way to “Fully Open (A)”.
2. Turn the ignition switch (5) to ON. Make sure that the transmission is in the neutral by checking the neutral indicator lamp (6).
3. Press the starter button (7) or operate the kick starter and start the engine.


NOTE:

- * Do not use the electric starter for more than 5

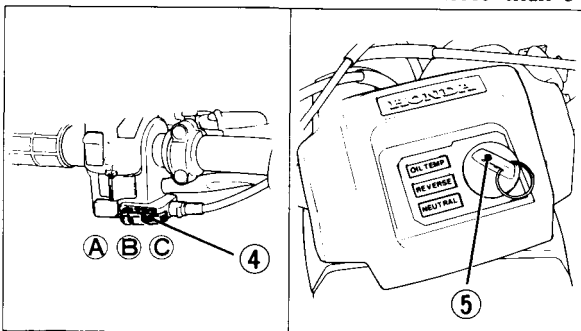

(4) Choke lever

(5) Ignition switch

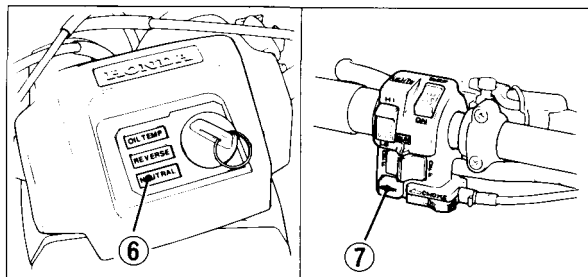

(6) Neutral indicator lamp

(7) Starter button

- seconds at a time. Release the starter button for approximately 10 seconds before pressing it again.
 - * To prevent a weak or discharged battery, use the kickstarter if you encounter any difficulty in cranking the engine with the starter or motor.
 - * The starter motor will operate only when the transmission is in neutral.
 - * This vehicle is equipped with an electric fuel pump which will not operate properly when battery voltage is less than 5V. When battery voltage is less than 5V, remove the battery and change it.
4. Immediately after the engine starts, release the starter button and set the choke lever to “detent position (B)”.
 5. About a half minute after the engine starts, move the choke lever all the way to “Fully Closed (C)”.
 6. If idling is unstable, open the throttle slightly.