


Insert the rim plate into the tire.

Place the rim with the valve on the rim plate and position the tire.

Seat a new O-ring in the groove of the rim.

NOTE

Lightly grease the O-ring.

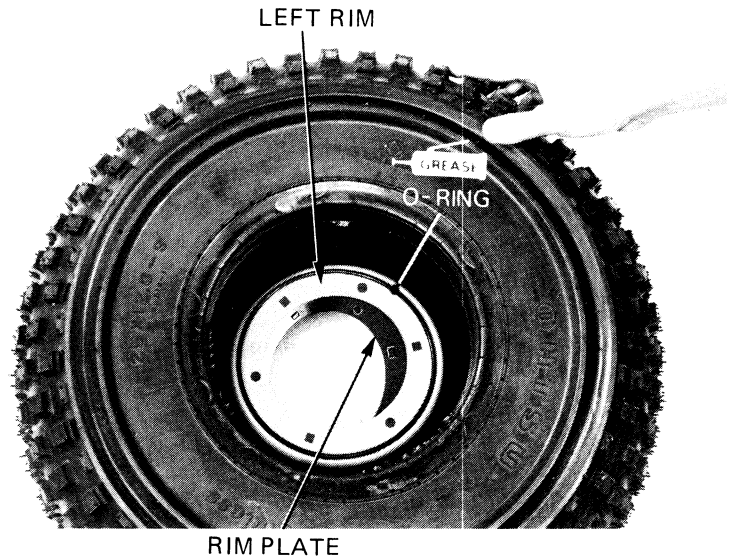


Install the other rim and rim plate.
Align the rim bolt holes and install the bolts.
Install each washer and tighten the nuts.

TORQUE: 18–25 N·m (1.8–2.5 kg·m,
13–18 ft·lb)

Inflate the tire to seat the tire bead.

NOTE

Use tire mounting lubricant or a soap and water solution to help seat the tire bead.

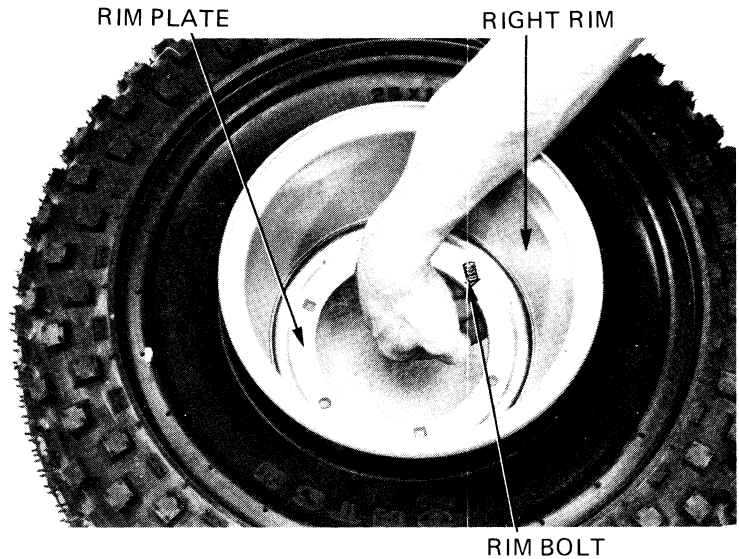

Deflate the tire. Wait 1 hour and inflate the tire to the specified pressure.

TIRE PRESSURES:

Maximum pressure:

18 kPa (0.18 kg/cm², 2.6 psi)

Recommended pressure:

15 kPa (0.15 kg/cm², 2.2 psi)

Minimum pressure:

12 kPa (0.12 kg/cm², 1.7 psi)

Measure the tire circumference.

STANDARD TIRE CIRCUMFERENCE:

1,760 mm (69.3 in)

NOTE

The tires must have the same circumference to prevent improper steering and handling.

Check for air leaks and install the valve cap.

