


Spark Plugs

- Using a spark plug wrench, remove the spark plugs.

LEFT SIDE

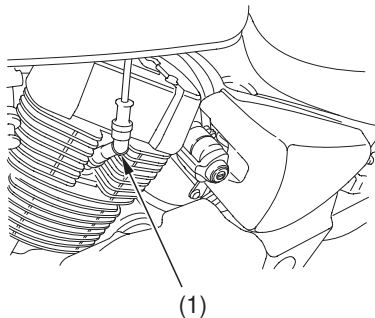

(1) spark plug cap

- Inspect the electrodes and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, if available, or a wire brush.
- Check the spark plug gap (2) of each new plug, using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (3) carefully. The gap should be:
0.031 – 0.035 in (0.80 – 0.90 mm)

(cont'd)