


## Optional Stiffer 0.49 kgf/mm (27.44 lbf/in) Fork Spring

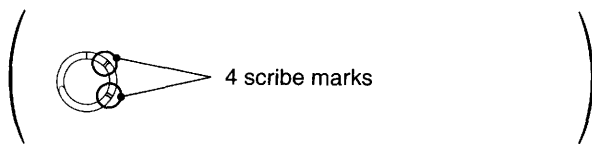


Standard oil capacity	398 cm <sup>3</sup> (13.5 US oz ) (14.0 Imp oz )	
Maximum oil capacity	427 cm <sup>3</sup> (14.4 US oz ) (15.0 Imp oz )	Slightly stiffer as it nears full compression.
Minimum oil capacity	331 cm <sup>3</sup> (11.2 US oz ) (11.7 Imp oz )	Slightly softer as it nears full compression.

Be sure the oil capacity is the same in both fork legs.

7. Check that the O-ring (9) on the fork damper (2) is in good condition. Apply the recommended fork oil to the O-ring. Temporarily install the fork damper to the outer tube (1). After installing the fork leg (page 109), tighten the fork damper to the specified torque:  
Actual:  
34 N·m (3.5 kgf·m, 25 lbf·ft)

Torque wrench scale reading:  
31 N·m (3.2 kgf·m, 23 lbf·ft), using a 50cm (20 in) long torque wrench.

When using the lock nut wrench, use a 50cm (20 in) long deflecting beam type torque wrench. The lock nut wrench increases the torque wrench's leverage, so the torque wrench reading will be less than the torque actually applied to the fork damper.

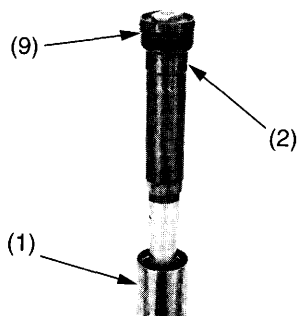

- (1) outer tube
- (2) fork damper
- (9) O-ring